GEPRC


Cinelog35 v3机架组装说明书

Cinelog35 v3 Frame Assembly Instructions




组装步骤
Assembly Steps


1.压铆螺母安装
Step 1: Install Rivet Nuts

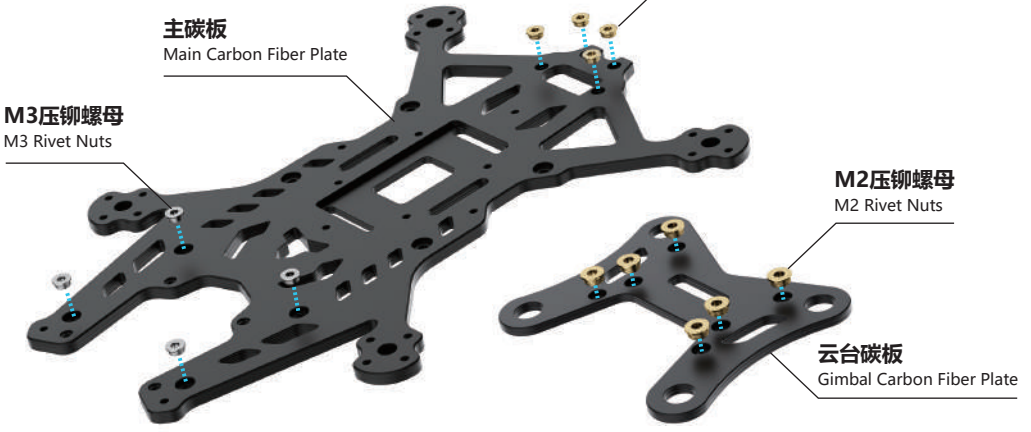


2.铝柱/电源头/飞控螺丝组装
Step 2: Install Aluminum Standoffs / Power Lead Mount / FC Screws

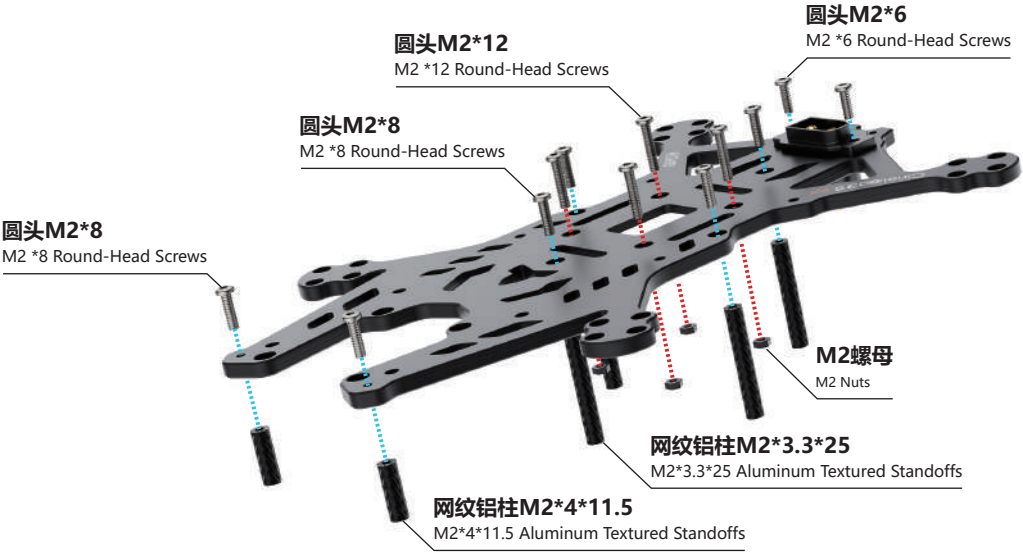


3.电池铝件/尾部打印件组装
Step 3: Install Battery Aluminum Parts / Rear 3D-Printed Parts

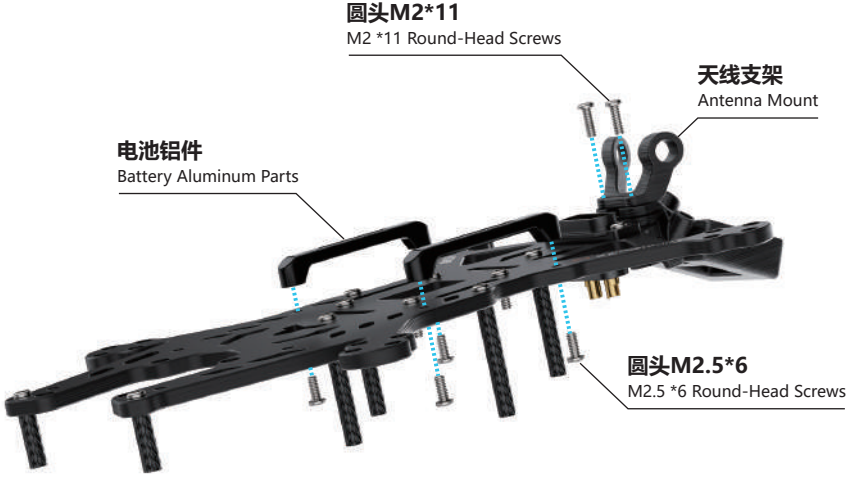


4.镜头支架安装
Step 4: Install the Lens Mount

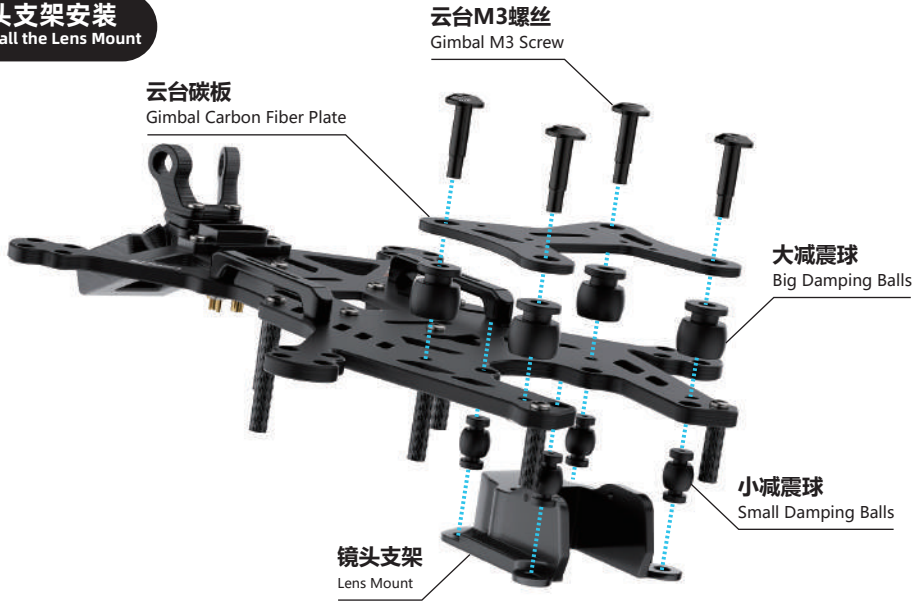

5.电容固定件/接收机固定件安装
Step 5: Install Capacitor Mount / Receiver Mount

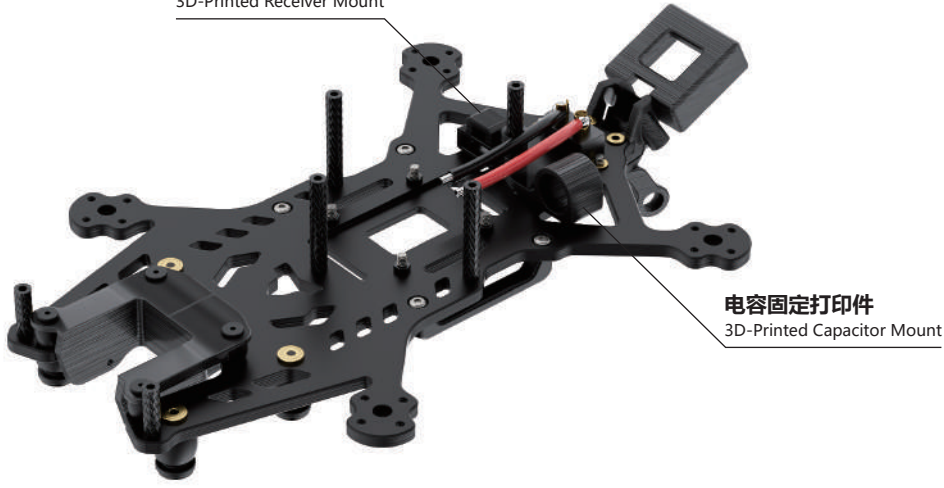

6.保护框/底板安装
Step 6: Install the Prop Guards / Bottom Plate

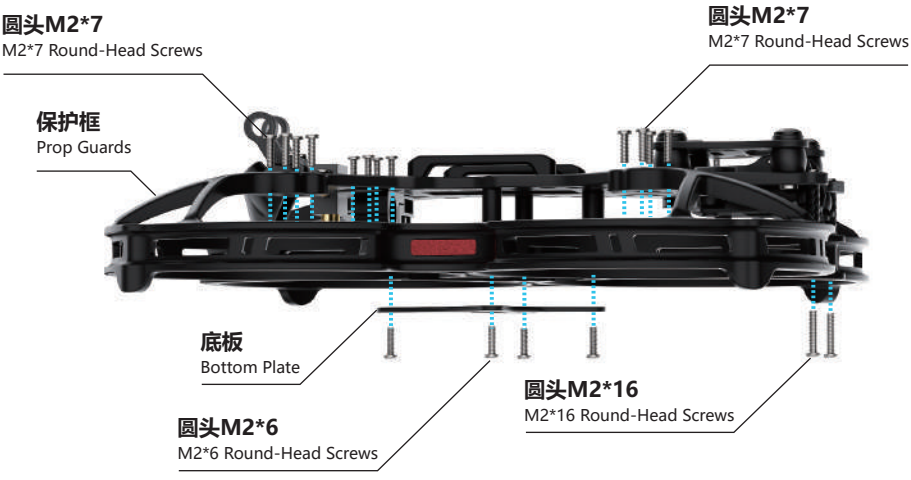

更详细的信息，可通过访问GEPRC官网获取

For more information, pls refer to the GEPRC official website

facebook

facebook.com/geprc

Official website

www.geprc.com

Manual

geprc.com/support

Instagram

instagram.com/geprc

YouTube